

# Installation Instructions

## 安裝說明書

REINFORCED BODY MOUNT BUSHING

強化大樑橡皮

#Q1454

### Application 適用車型


SUZUKI JIMNY '18- (JB64/74)

### Components 內含配件



### Instructions 安裝說明

- Remove the factory body mount bushes, then install the new bushes and hardware to the below indicated location.  
拆下原廠大樑橡皮，並依照圖示將新的橡皮及配件安裝至指定位置。
- ※ Reuse the factory hardware for the parts not marked blue. If any damages or deformation is inspected, we suggest replace them with new genuine parts.  
未標註藍色的部分則沿用原廠的配件安裝，若有變形及損壞建議更換原廠新品。
- ※ Removal of front headlights and grille is required to access the front body mount bush.  
安裝最前端大樑橡皮須將頭燈及前水箱罩卸下。
- ※ We recommend applying some Loctite to the front body mount bolts.  
最前端的大樑橡皮建議將固定螺絲塗上螺絲膠/防鬆劑後安裝。

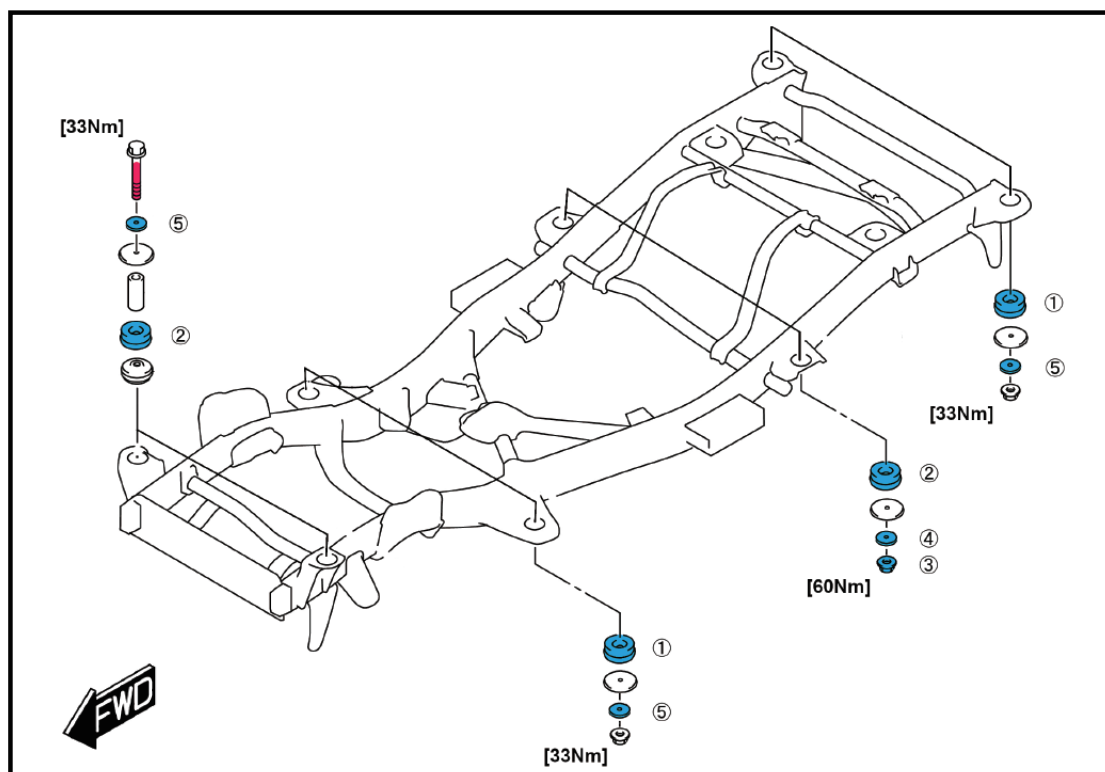

### Caution 注意事項

- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.  
安裝過程請使用手動工具確實鎖緊螺帽及螺絲，如有特別註明請依照說明指示的扭力上鎖。
- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.  
安裝建議由合格的技師及工具執行以確保安全，安裝錯誤可能對人員、產品及車輛造成傷害。

- Note the routing of wires and cables before installation, or please refer to factory manual.  
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置，有疑問時請參考原廠手冊。